


IN CASE OF ALARM

1. **Press**  **key** Siren stops. Read the system alarm code shown in the display.

SYSTEM ALARM CODE	MEANING
-1	Overall alarm supervision is suspended, including power monitoring..
0	OK, alarm supervision is activated for all inputs that are active(lights are ON)
1	Outdoor Temperature is too low
2	Outdoor Temperature is too high
5	Outdoor Temperature sensor is short circuited
6	Outdoor Temperature sensor is disconnected
7	Pause activated. Alarm supervision suspended. Restarts automatically.
8	Error from external unit somewhere else on the network
9	Battery test warning: During test the measured voltage drops below 11.7 V
10	Battery test alarm: During test, the measured voltage drops below 11.5 V
11	Battery alarm : The measured voltage drops below 11.5 V
12	Power supply failure: The measured voltage drops below 12.5 V (230V, mains?)
13	Short circuit failure
14	Alarm from input/temperature sensor - note flashing input keys, indicating which is in alarm mode. Refer to 2. Input-ALARM CODE
214	Error on telephone equipment or telephone line

2. **Input alarm code - status of the individual inputs**

Press **TILBAGE** followed by **ALARM GRÆNSER**. Read the input alarm code concerning the flashing keys.

Input ALARM CODE	MEANING
-1	Alarm supervision is OFF for this input
0	Alarm supervision is ON and state= OK for this input
1	Minimum Temperature limit is exceeded - Too Low Temperature
2	Maximum Temperature limit is exceeded - Too High Temperature
3	High outdoor temperature warning: Temperature has exceeded maximum limit, but not Outdoor temperature + addendum) This is a warning and <i>not an alarm condition</i> , and the ALARM light does not flash.
4	Max. change, within the past 10 minutes, is exceeded.

3. **Restart.**

After the alarm cause has been corrected, alarm supervision is restarted by pressing



If everything is OK, the display will show "0" and the alarm lamp will have the light on.